 


# OUTSIDE AIR REPLACEMENT SENSOR MODULE

## Installation Instructions




### INTRODUCTION

The outside air replacement sensor module is a pre-calibrated humidity and temperature module that can be used to due field replacement on the HS & HN Series outside air humidity series (OS) sensors.


The sensors are incorporated in a PVC sensor hub that makes field replacement easy.

### BEFORE INSTALLATION


Read these instructions carefully before installing and commissioning the water detector. Failure to follow these instructions may result in product damage. Do not use in an explosive or hazardous environment, with combustible or flammable gases, as a safety or emergency stop device or in any other application where failure of the product could result in personal injury. **Take electrostatic discharge precautions during installation and do not exceed the device ratings.**

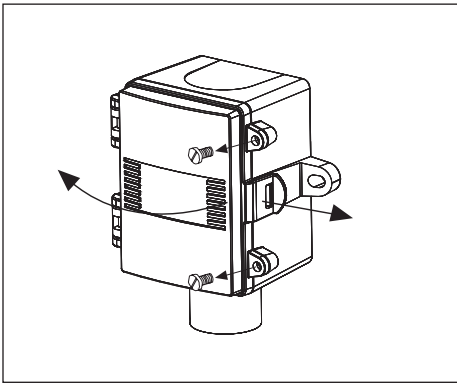


**1** Remove security screws (if applicable) and open enclosure.

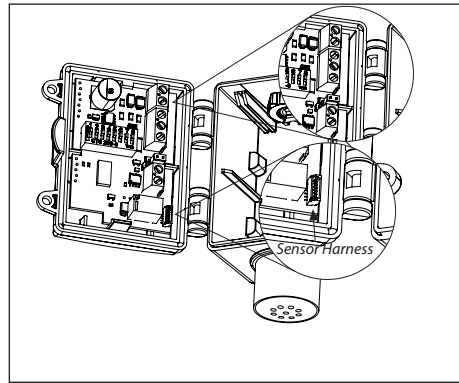


**2** Disconnect power wires. Unplug sensor harness from main PCB.

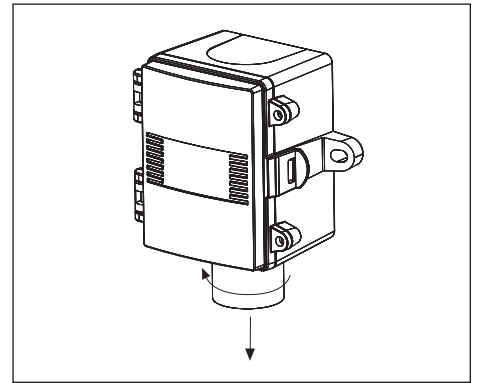


**3** Unscrew the sensor hub from bottom of the enclosure..

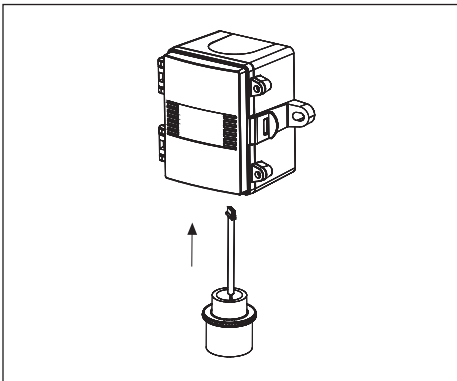


**4** Install replacement module by inserting harness and screwing sensor hub into the bottom of the enclosure.

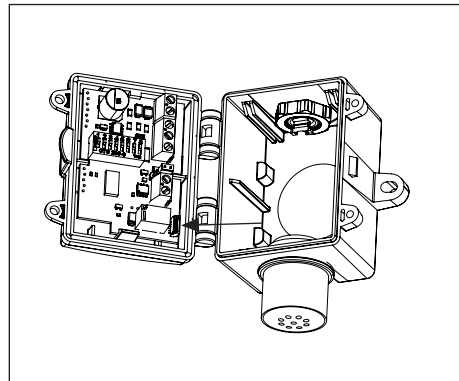

**5** Plug harness into PCB.

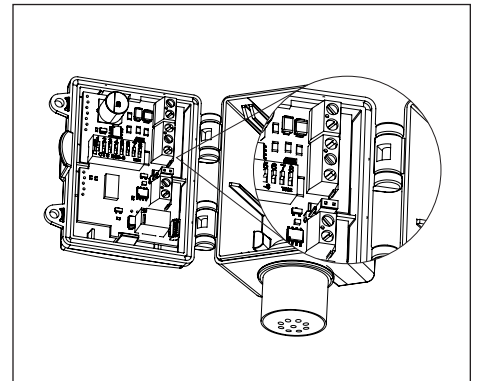

**6** Reinstall power wires and apply power.

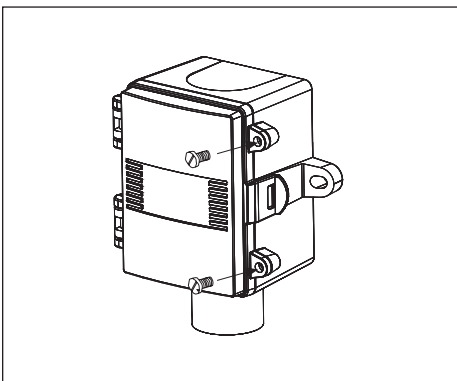

**7** Close enclosure and reinstall security screws (if applicable).