

**HTX1W/HTX1R – Wall / Remote
probe RH/Temperature transmitter
Hub Room / Server Room**

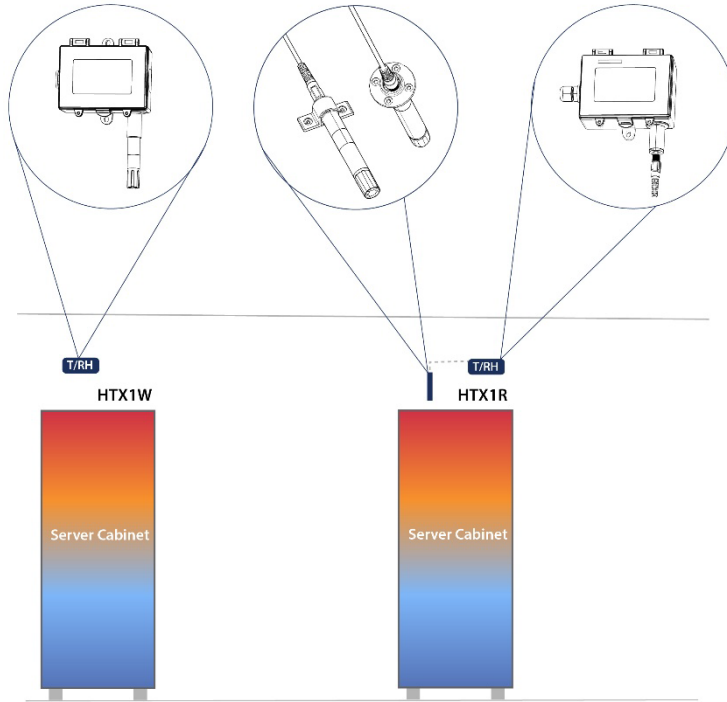


Figure 1: Section

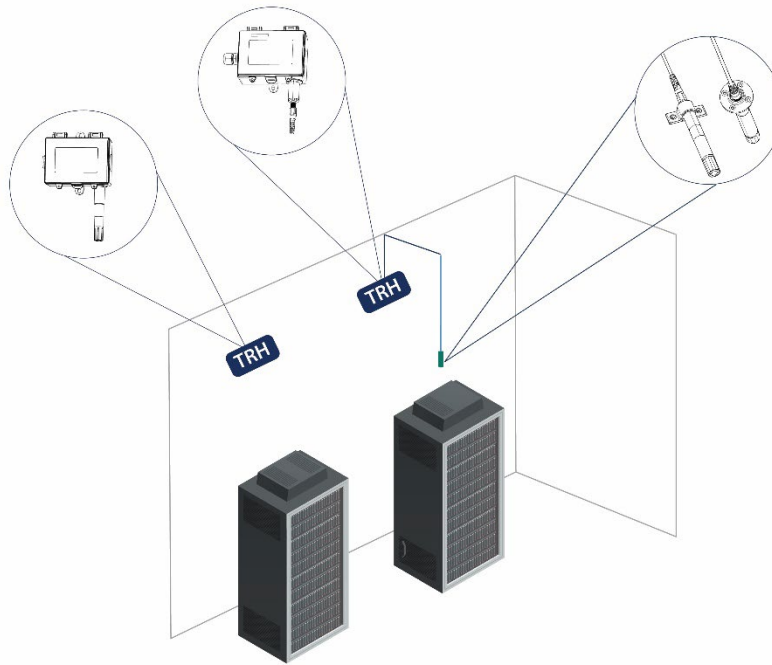


Figure 2: 3D



1. Refer to instruction manual for wiring connections and other suggestions.
2. Remote probe Temp/RH transmitter comes with two parts, main PCB box and remote probe.
3. Main PCB box will be mounted directly on a standard wall electrical box.
4. Identify the hot aisle area to locate the Temp/RH probe. If the rack cage is having multiple racks, use multiple Temp/RH probes or identify the perfect RA path to locate the Temp/RH transmitter as shown in above typical installation Figure 2
5. For Wall mount option, Identify the hot aisle area to locate the RH/Temperature transmitter. If the rack cage is having multiple racks, use multiple RH/Temperature transmitters or identify the perfect RA path to locate the RH/Temperature transmitter as shown in above typical installation image.
6. Do not mount the Temp/RH probe near doors, open windows, supply air diffusers or other known air disturbances, ensure there is free airflow around the sensor probe to obtain accurate readings
7. Do not mount the Temp/RH probe near doors, open windows, supply air diffusers or other known air disturbances, ensure there is free airflow around the sensor probe to obtain accurate readings
8. Avoid areas where the location is exposed to vibrations or rapid temperature change
9. Follow proper electrostatic discharge (ESD) handling procedures when installing the device or equipment damage may occur.
10. Do not locate the Temp/RH probe cable in the same conduit with cable used to supply inductive loads such as motors
11. Connect the 24V ac/dc power supply to the terminals labelled PWR (power) and COM (common) and maintain a minimum voltage of 22V ac/dc.
12. 24V ac power is used, and one side of the transformer is earth grounded. In general, the transformer should NOT be connected to earth ground when using devices with RS-485 network connections.
13. Shielded wire cable connections and ground shield to the DDC panel Earth.
14. Shielded and twisted pair cable (A-, B+ and SHLD) should be used for communication (in a daisy chain configuration) type device and the shield to be connected to panel earth.
15. Use separate cable for 24v power supply and calculate consumption in case connecting multiple Temp/RH units to a single power source.
16. Set EOL jumper at the end of RS485 network communication loop.
17. Follow local electrical codes and use proper terminations (e.g., cable lugs, shielded cables).

