


Room Temperature Sensor

TSRC Series - Installation Instructions

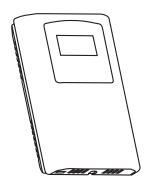

INTRODUCTION

The continental series is an attractive, low profile enclosure that incorporates a precision temperature sensor used to monitor room temperatures. Additional options are available that include set-point adjustment, manual override, fan speed, handset communication port, and an LCD.

BEFORE INSTALLATION

Read these instructions carefully before installing and commissioning the device. Failure to follow these instructions may result in product damage. Do not use in an explosive or hazardous environment, with combustible for flammable gases, as a safety or emergency stop device or in any other application where failure of the product could result in personal injury. Take electrostatic discharge precautions during installation. **Do not exceed the device ratings.**

MOUNTING

The temperature sensor mounts directly on a wall or onto an electrical wall box. For the most accurate results, the unit should be mounted on an inside wall to a wall box five feet from the floor. Do not mount the sensor near doors, opening windows, supply air diffusers, or other known air disturbances. Avoid areas where the sensor is exposed to vibrations or rapid temperature changes.

The cover is hooked to the base at the top edge and must be removed from the bottom edge first. Use a small Phillips screwdriver to loosen the security screw as shown in Figure 1. (Complete removal is not required). Use a screw driver to carefully pry each bottom corner if necessary. Tip the cover away from the base and sit it aside as shown in Figure 2.


SENSOR ONLY


Feed at least 6 inches of wire through the wall and out of the junction box and feed connection wires through the center hole on the backplate. Secure the backplate to the wall or electrical box with suitable screws (not supplied) as shown in Figure 3. The mounting holes in the backplate allow for up, down, and side to side movement to compensate for unlevel electrical box installation.


Retrieve the sensor with clip. Turn the clip over and remove the backing from the clip to expose the adhesive back. Stick the clip on a smooth surface of the backplate. See Figure 4.


Make wire connections as per the Wiring Illustrations on Page 2.


Re-install the decorative cover by placing the top of the cover into the cover holder on the top of the backplate and snapping the bottom into place as shown in Figure 7. Tighten security screw with a screwdriver.

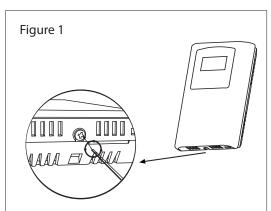


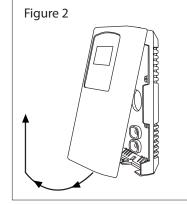


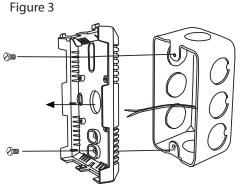

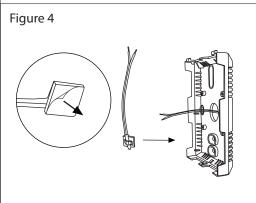

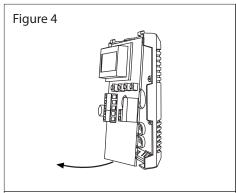

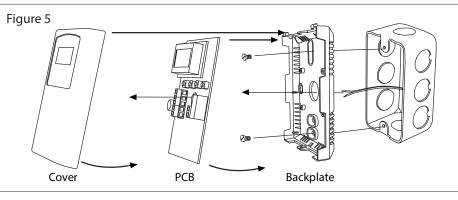

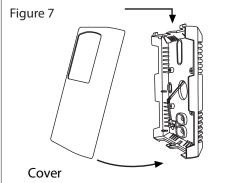

WITH PCB

The PCB must be removed from the base to access the mounting holes. Follow usual anti-static procedures when handling the PCB and be careful not to touch the sensors. The PCB is removed by pressing the enclosure base to unsnap the latch near the bottom edge, then the PCB can be lifted out of the base as shown in Figure 4.

Set the PCB aside until the base is mounted on the wall. For added protection, place the PCB in the supplied anti-static bag.

Mount the base by screwing it to an electrical box or directly to the


wall as shown in Figure 5.


After the base is screwed to an electrical box or the wall using the appropriate holes, remove the PCB from the anti-static bag, feed connection wires through center hole and place the top of the PCB into the PCB holders on the backplate and snap the bottom of the PCB into place as shown in Figure 5.


Make wire connections as per the Wiring Illustrations on pages 2 and 3. Re-install decorative cover by placing the top of the cover into the cover holder on the top of the backplate and snapping the bottom into place as shown in Figure 7. Tighten security screw with a screwdriver.

WIRING

- If LCD is present, deactivate the 24 Vac/dc power supply until all connections are made to the device to prevent electrical shock or equipment damage. Follow proper electrostatic discharge (ESD) handling procedures when installing the device or equipment damage may occur.
- Use 22 AWG shielded wiring for all connections and do not locate the device wires in the same conduit with wiring used to supply inductive loads such as motors. Connect the cable shield to ground at the controller only. Make all connections in accordance with national and local codes.
- Connector layout is shown in Figure 9. The diagram shown includes all options, if an option is not ordered, the connector will not be present.

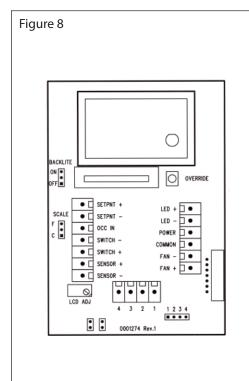

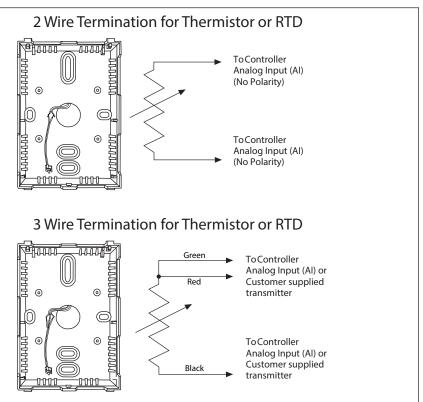

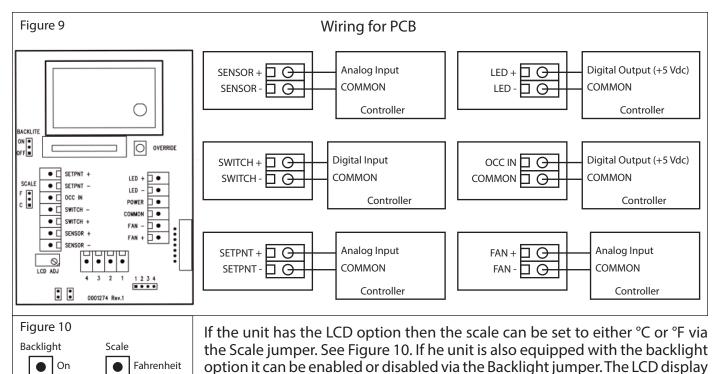

can be calibrated by adjusting the LCD ADJ pot.

SPECIFICATIONS

Celsius

Off

GENERAL Sensing Element......Various thermistors and RTD's **Platinum RTD's:** $\pm 0.3^{\circ}$ C ($\pm 0.54^{\circ}$ F) @ 0° C (32° F) **Nickel RTD's:** $\pm 0.4^{\circ}\text{C}$ ($\pm 0.72^{\circ}\text{F}$) @ 0°C (32°F) Operating Conditions 0 to 50°C (32 to 122°F) Wiring Connections...... Screw terminal block (14 to 22 AWG) Sensor only: Pigtail, 2 or 3 wire Enclosure......White ABS, IP30 (NEMA 1)

84mm W x 119mm H x 29mm D (3.3" x 4.7" x 1.15")

Country of Origin.....Canada

OVERRIDE SWITCH

Switch Type......Front panel, momentary push-button, N.O., SPST, 50 mA @ 12 Vdc

FAN SPEED SWITCH

Range...... Auto, Off, Low, Medium, High Signal **Resistance:** 2K, 4K, 6K, 8K, and 10K Ω standard (custom ranges available)

SET-POINT SLIDE POT

Range...... Front panel pot as resistive output, 20 to 20K Ω

Custom Spans Available.... 1K, 2K, 5K, 10K, or 20K Ω

OCCUPIED INPUT

Signal Type......Digital input, 0-5 Vdc, active low Action......Causes "OCC" segment to light on LCD

LED INPUT

Signal Type......Active high, low, or 2 wire, 5 V current limit standard

LED Colors.....Red, Green, or Yellow

Power Supply....... 5 Vdc standard, 10 Vdc or 24 Vdc optional

LCD DISPLAY

Power Supply......12-24 Vdc / 24 Vac ± 10%

Consumption @ 24 Vdc...... 13 mA max (no backlight) 23 mA max (with backlight)

Protection Circuitry.....Reverse voltage protected Range0.0-35.0°C or 32.0-95.0°F

jumper selectable

Resolution0.1°C/°F

Digit Height11.43mm (0.45")

Symbols.....°C, °F, OCC

BacklightEnable or disable via jumper

DIMENSIONS

