




INTRODUCTION

The duct dewpoint transmitter is designed for use in environmental monitoring and control systems where high performance and stability are demanded. It's state-of-the-art design combines digital linearization and temperature compensation with a highly accurate and reliable thermoset polymer based capacitance humidity sensor and curve-matched NTC thermistor temperature sensor for reliability and accuracy in the most critical applications. The sensors are encapsulated in a 60 micron HDPE filter at the end of a 230 mm (9") S/S probe and a compact enclosure.

BEFORE INSTALLATION

Read these instructions carefully before installing and commissioning the transmitter. Failure to follow these instructions may result in product damage. Do not use in an explosive or hazardous environment, with combustible or flammable gases, as a safety or emergency stop device or in any other application where failure of the product could result in personal injury. **Take electrostatic discharge precautions during installation and do not exceed the device ratings.**

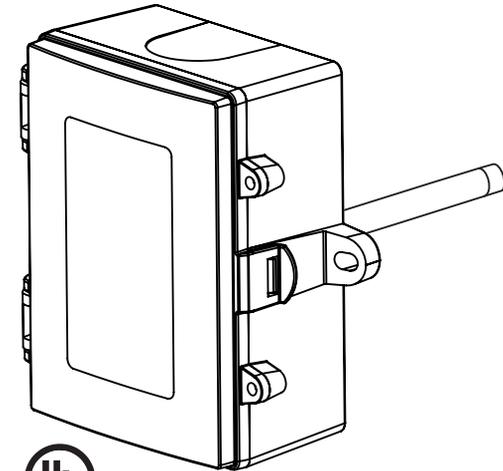

MOUNTING

The transmitter installs directly into any air duct with a minimum width/diameter of 25.5 cm (10"). Select a suitable installation area in the middle of the duct wall. To achieve the best reading, do not place in an area where air stratification may be present. Mount the sensor at least 1.5 m (5') in either direction from elbows, dampers, filters or other duct restrictions. Avoid areas where the transmitter is exposed to vibrations or rapid temperature changes.

Once a suitable spot is selected, drill a 15 -20 mm (0.6" - .75") hole for the probe.

Slide the probe in the drilled hole until the enclosure is flush against the duct. The airflow direction is not important. Secure the enclosure to the duct with (2) #10 x 1" (25 mm) self tapping screws (not provided). Tighten screws until the enclosure is tight against the duct and that there is no movement of the enclosure as shown in Figure 1.

A foam gasket is provided on the back of the enclosure that provides a tight seal against any air leaks.

The enclosure has a hinged cover with a latch. Open the cover by pulling slightly on the latch on the right side of the enclosure and at the same time pulling on the cover, as illustrated in Figure 2.

A 1/2" NPT threaded connection hole is provided in the bottom of the enclosure as shown in Figure 3. Screw the EMT connector or cable gland connector in until tight. It is recommended that weatherproof conduit or cable gland fittings be used. The F style enclosure includes 1/2" NPT to M16 thread adapter and cable gland fitting.

Two security screws are provided which can be installed to help secure the cover once settings and wiring connections are complete. See Figure 4.

Figure 1

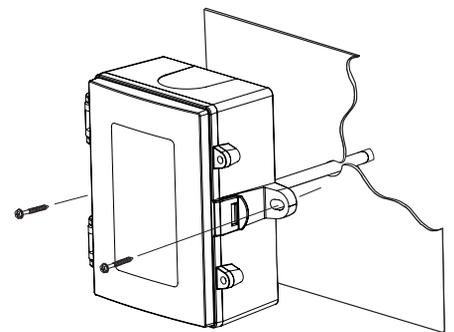


Figure 2

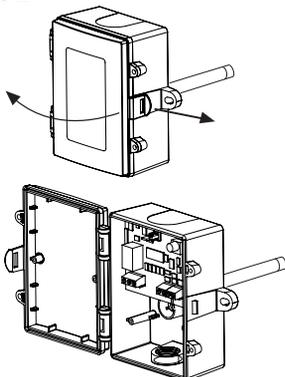


Figure 3


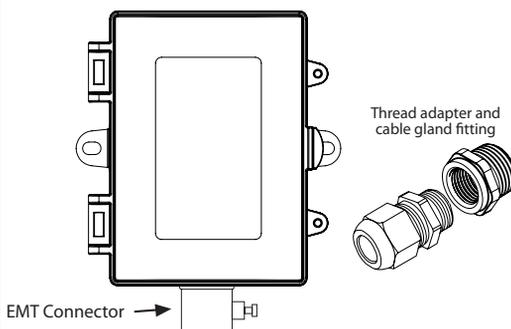


Figure 4

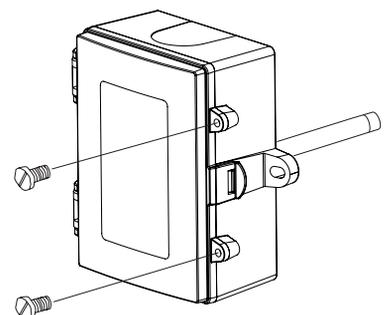

OUTPUT SELECTION

The device has selectable 4-20 mA, 0-5 Vdc or 0-10 Vdc Outputs. To select 4-20 mA, slide both output switches to CUR. To select 0-5 Vdc or 0-10 Vdc Outputs, slide both switches to VOLT. See Figure 5. When VOLT is selected, the default is 0-5 Vdc. It may be changed to 0-10 Vdc during set up.

WIRING

- Deactivate the 24 Vac/dc power supply until all connections are made to the device to prevent electrical shock or equipment damage.
- Follow proper electrostatic discharge (ESD) handling procedures when installing the device or equipment damage may occur.
- Use 22 AWG shielded wiring for all connections and do not locate the device wires in the same conduit with wiring used to supply inductive loads such as motors.
- Make all connections in accordance with national and local codes.

Connect the 24 Vac/dc power supply to the terminals labeled PWR (power) and COM (common) as shown in Figure 6. This device has a half-wave type power supply so use caution when wiring multiple devices so that the circuit ground point is the same on all devices and the controller. The device is reverse voltage protected and will not operate if connected backwards.

Figure 5

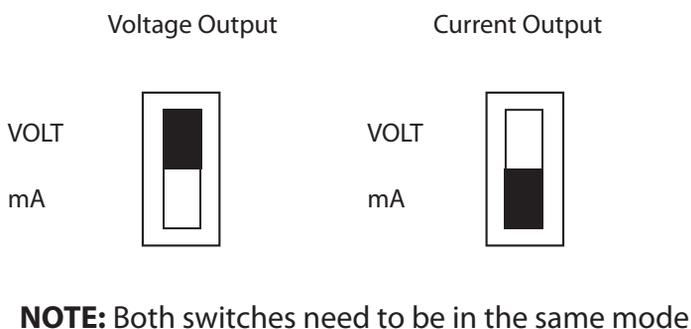


Figure 6



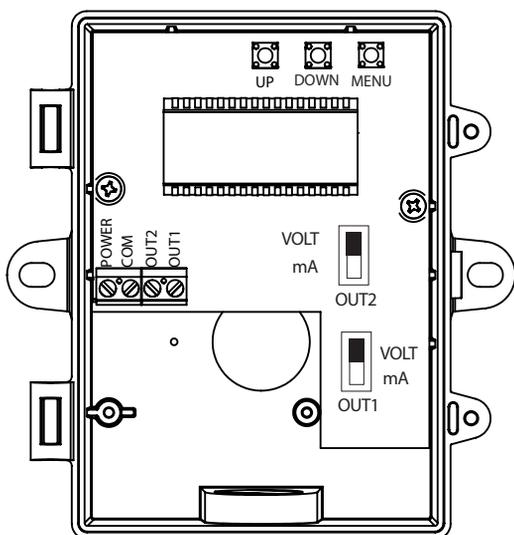


Figure 7

Wiring for all output signals with power from controller

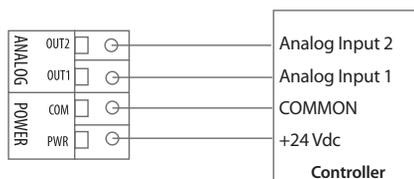

Wiring for all output signals with external power supply or transformer

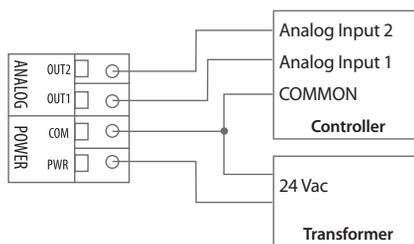

OPERATION

START-UP MODE

When the device is powered on, it will go through a brief start-up mode. The LCD will display a sequence of information depending on the model. At the end of the start-up sequence, normal operation will begin.

STEP 1. LCD TEST



All segments lit for 2 seconds.

STEP 2. SOFTWARE VERSION



Display Software Version for 2 seconds

STEP 3. MODEL



Displays the model type for 2 seconds.
(Volt or current depending on output selected)

STEP 4. DEFAULTS



Displays Readings as per Channel 1 & 2 Defaults (RH & Temp).
Alternates 2 Second Intervals

NORMAL MODE

In normal operation the device:

- reads the temperature and RH sensors
- calculates values for dewpoint, wet bulb and enthalpy
- updates the LCD values
- updates the analog outputs
- monitors the menu key for activity

If the <MENU> key is pressed, normal operation is suspended while the menu functions are serviced. The program will automatically exit the menu after a period of inactivity.

MENU

The device has several parameters that can be configured locally via the User menu using the keypad and LCD. All parameters default to typical values but the installer may want to change some values. Any changes made are saved in non-volatile memory and are restored in case of a power loss. Only the menu items relevant to the device model will be shown. The menu can be accessed at any time after the start-up mode and if there is 5 minutes of inactivity the menu will close and normal operation will continue.

User Menu

To enter the menu, press and release the <MENU> key. This will enter the User menu step 1, pressing the <MENU> key a second time advances to step 2. Each press of the <MENU> key saves the current setting and advances the menu item. The <UP> and <DOWN> keys are used to make changes to program variables by scrolling through the available options. When a value is changed, use the <MENU> key to save it to memory and advance to the next menu item.

<MENU> Press and release to enter the User menu.

1. VOLTAGE OUTPUT



This setting only shows if the output jumpers were set to VOLT.
The default is 0-5 Vdc.
Press <UP> or <DOWN> to toggle the selection.



Press <MENU> to save and advance to next menu item

2. TEMPERATURE UNITS



Press <UP> or <DOWN> to toggle the selection.
Press <MENU> to save and advance to next menu item



3. CHANNEL 1 SETTINGS



Default is Humidity.
Press <MENU> to save and advance directly to STEP 5 - Channel 2 Settings
Press <UP> or <DOWN> to scroll through additional parameter options



Temperature



Dewpoint



Wet Bulb



Enthalpy

Press <MENU> to select and save parameter and advance to range selection

4. CHANNEL 1 RANGE SELECTION

Only shows if parameter changed in previous step
Only ranges for selected parameter will be shown

4.1 TEMPERATURE RANGE




Default is -30 to 50 °C
Press <MENU> to save and advance directly to STEP 4 - Channel 2 Settings
Press <UP> or <DOWN> to scroll range options



-30-50 °C



0-50 °C



-22-122 °F



32-122 °F

Press <MENU> to select and save range and advance to STEP 4 - Channel 2 Settings


4.2 DEWPOINT RANGES



Default is -30 to 50 °C
Press <MENU> to save and advance directly to STEP 4 - Channel 2 Settings
Press <UP> or <DOWN> to scroll range options




-30-50 °C




-20-40 °C




0-50 °C



-22-122 °F



-4-104 °F



32-122 °F

Press <MENU> to select and save range and advance to STEP 4 - Channel 2 Settings

4.3 WET BULB RANGES




Default is -20 to 50 °C
Press <MENU> to save and advance directly to STEP 4 - Channel 2 Settings
Press <UP> or <DOWN> to scroll range options



-20-50 °C



0-50 °C



-4-122 °F



32-122 °F

Press <MENU> to select and save range and advance to STEP 4 - Channel 2 Settings

4.4 ENTHALPY RANGES

01 kJ/kg
BTU/lb

Default is 250 kJ/kg

Press <MENU> to save and advance directly to STEP 4 - Channel 2 Settings

Press <UP> or <DOWN> to scroll range options

250 kJ/kg

340 kJ/kg

107 BTU/lb

146 BTU/lb

Press <MENU> to select and save range and advance to STEP 4 - Channel 2 Settings

5. CHANNEL 2 SETTINGS

02 ^F

Default is Temperature.

Press <MENU> to save and advance directly to STEP 7 - LCD Display

Press <UP> or <DOWN> to scroll through additional parameter options

02H

Humidity

02^{Td}

Dewpoint

02^{Tw}

Wet Bulb

02 kJ/kg
BTU/lb

Enthalpy

Press <MENU> to select and save parameter and advance to range selection

6. CHANNEL 2 RANGE SELECTION

Only shows if parameter changed in previous step

Only ranges for selected parameter will be shown

6.1 TEMPERATURE

02 ^F

Default is -30 to 50 °C

Press <MENU> to save and advance directly to STEP 7 - LCD Display

Press <UP> or <DOWN> to scroll through options

-3-5 °C

-30-50 °C

0-5 °C

0-50 °C

-2-1 °F

-22-122 °F

3-1 °F

32-122 °F

Press <MENU> to select and save parameter and advance to range selection

6.2 HUMIDITY

02H

Press <MENU> to save and advance directly to STEP 7 - LCD Display

Press <MENU> to select and save parameter and advance to range selection

6.3 DEWPOINT

02^{Td}

Default is -30 to 50 °C

Press <MENU> to save and advance directly to STEP 7 - LCD Display

Press <UP> or <DOWN> to scroll through options

-3-5 °C^{Td}

-30-50 °C

-2-4 °C^{Td}

-20-40 °C

0-5 °C^{Td}

0-50 °C

-2-1 °F^{Td}

-22-122 °F

-4-1 °F^{Td}

-4-104 °F

3-1 °F^{Td}

32-122 °F

Press <MENU> to select and save parameter and advance to range selection

6.4 WET BULB

02_{TW}

Default is -20 to 50 °C
Press <MENU> to save and advance directly to STEP 7 - LCD Display
Press <UP> or <DOWN> to scroll through options

-2-5^{°C}_{TW}
-20-50 °C

0-5^{°C}_{TW}
0-50 °C

-4-1^{°F}_{TW}
-4-122 °F

3-1^{°F}_{TW}
32-122 °F

Press <MENU> to select and save parameter and advance to range selection

6.5 ENTHALPY

02<sub>kJ/kg
BTU/lb</sub>

Default is 250 KJ/KG
Press <MENU> to save and advance directly to STEP 7 - LCD Display
Press <UP> or <DOWN> to scroll through options

250_{kJ/kg}

340_{kJ/kg}

107_{BTU/lb}

146_{BTU/lb}

Press <MENU> to select and save parameter and advance to next menu item

7. LCD DISPLAY

L 12

Alternate Channel 1 and Channel 2
Press <UP> or <DOWN> to scroll through options

L 1

L 2

Press <MENU> to save and advance to next menu item

8. TEMPERATURE OFFSET

± 00^{°C}

Default = 0 °C or 0 °F
Press <UP> or <DOWN> to scroll through options

-± 5.0^{°C}
-5.0 °C

± 5.0^{°C}
5.0 °C

-± 10^{°F}
-10 °F

± 10^{°F}
10 °F

Press <MENU> to save and advance to next menu item

9. HUMIDITY OFFSET

00H

Default is 0% RH
Press <UP> or <DOWN> to set offset

Press <MENU> to save and advance to next menu item

10. ALTITUDE

00
6000 FT

Default is 0 meters
Press <UP> or <DOWN> to set altitude

Press <MENU> to save and advance to next menu item

SPECIFICATIONS:

Measurement Range:

Relative Humidity0 - 100 %RH
 Dry Bulb Temp.....-30 to 50 °C (-22 to 122 °F)

Calculated Values:

Dewpoint Temp.....-30 to 50 °C (-22 to 122 °F)
 Wet Bulb Temp.....-30 to 50 °C (-22 to 122 °F)
 Enthalpy0 to 340 kJ/kg (0 to 146 BTU/lb)

Accuracy:

Relative Humidity (RH)± 2% RH, 10 to 90 %RH @ 25 °C
 Dry Bulb Temp (T).....±0.2°C (±0.4°F) @ 0 to 50°C (32 to 122°F)
 Dewpoint Temp (Td).....± 1.0°C (±1.8°F) @ 40%RH / 25°C
 Wet Bulb Temp (Tw).....± 1.0°C (±1.8°F) @ 50%RH / 25°C
 Enthalpy±2 kJ/kg (±1 BTU/lb) @ 50%RH / 25°C

LCD Display Values:

Relative Humidity0 to 100% RH (1% RH resolution)
 Temperature-30.0 to 50.0°C (0.5°C res) or -22 to 122°F (1°F res)
 Dewpoint.....-30.0 to 50.0°C Td (0.5°C res) or -22 to 122°F Td (1°F res)
 Wet Bulb.....-20.0 to 50.0°C Tw (0.5°C res) or -4 to 122°F Tw (1°F res)
 Enthalpy0 to 340 kJ/kg (1 kJ/kg res) or 0 to 146 BTU/lb (1BTU/lb res)

BACnet® Protocol.....

MS/TP, 2-wire RS-485, 0-127 slave address range
 Baud Rate - 9600, 19200, 38400, 57600, or 115200

Modbus Protocol.....

RTU, 2-wire RS-485, 1-255 slave address range
 Baud Rate - 300, 600, 1200, 2400, 4800, 9600, 19.2K, 38.4K

Operating Conditions.....

-30 to 60°C (-22 to 140°F), 0 to 95%RH non-condensing

Wiring Connections.....

14-22 AWG screw terminal block

Power Source UL.....

24Vac/Vdc, SELV (Class 2)
 22 to 27Vdc or 16 to 27Vac, non-isolated, half wave rectified
 Consumption... **Current:** 50mA @ 24Vdc, 1.5VA max
Voltage: 30mA @ 24vdc, 1VA @ 24Vac

Outputs.....

Analog (2X): 4-20mA, 0-5Vdc, 0-10Vdc (field selectable)
 Impedance @ 24Vdc... Current: 500Ω max, Voltage: 10KΩ min
 Limited Energy <15W
Network Communication: BACnet® or Modbus

Protection Class.....

III

UL Model.....

MRHLDTCSH

Certification.....

UL 60730 & CSA E60730, (UL E539555 file#)

UL2043 / CSA/ULC S142

Compliant.....

Suitable for Use in Air Handling Spaces in Accordance with Section 300.22, (C) of the National Electrical Code

Purpose of Control.....

Operating Control

Type of Action.....

Type 1

Impulse Voltage.....

330V

Pollution Degree.....

2

Enclosure.....

B: IP65 & NEMA 4X, Grey Polycarbonate UL94-V0
F: Same as B w/thread adapter (1/2" NPT to M16) & cable gland fitting
 Liquid tight cable gland cord grip 1.7-5.8mm (0.067-0.228")
Dimension: 112.5 W x 116.5 H x 53.7mm D (4.43 x 4.58 x 2.11")
Probe: 230 L x 12.7mm D (9 x 0.5"), 304 S/S with porous filter

EU Conformity/Approvals...CE

Country of Origin.....Canada

DIMENSIONS

