

REVISIONS						
ECN	REV.	DESCRIPTION	DATE	DRAW	CHECK	APPROVED
1261	A	Initial Release	2024/10/24	XY	XY	XY



SPECIFICATION

INPUT POWER:
 +24VDC nominal, range: 18 to 30VDC 0.3A DC Total Max.
 ~24VAC nominal, range: 18 to 24VAC 50/60HZ 0.3A AC Total Max.
 (AC must not be grounded if connects to M-Controller)

FUSE:
 F2 on Main Board: Polyswitch 750mA
 Polyswitch device resets after the fault is cleared and power to the circuit is removed

SENSOR:
 Combustible gases: Catalytic or NDIR
 Toxic gases and Oxygen: Electrochemical
 Carbon Dioxide: Non-Dispersive Infra-Red (NDIR)

OUTPUT SIGNAL:
 RS-485 with OPTIMUX PROTOCOL AND MODBUS PROTOCOL
 3X SPDT RELAYS: 1.0A MAX. @30VDC (RESISTIVE LOAD)
 0.3A MAX. @125VAC (RESISTIVE LOAD)

ENCLOSURE:
 IP 66 & NEMA 4, 4X, 12 & 13

OPERATING TEMPERATURE:
 -40°C to 50°C, depends on sensor specification

AMBIENT HUMIDITY:
 5% TO 95% RH (NON- CONDENSING)


STORAGE TEMPERATURE:
 0°C to 25°C, depends on sensor specification

SIZE: 150mm X 90mm X 65mm


WEIGHT: LESS THAN 0.5lbs

Option Accessories:

*Option Accessories are not included in Q6 or B6 Standard Package.

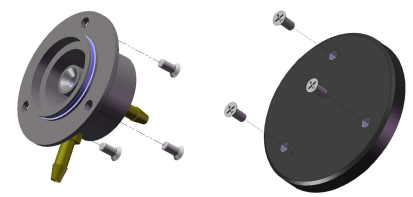

Pump-thru & Cal Cap Kit SKU#: 85930-006-005
 Splash Guard Kit SKU#: 85930-007-005

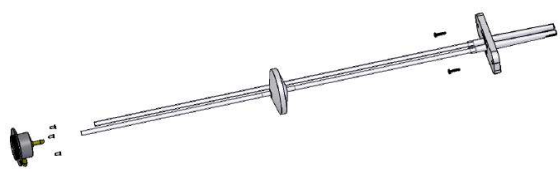


Duct Mount Adapter Kit: 85930-040-000




Q-View & USB-RS485 Converter Kit: 85930-004-000

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF QuatroSense Environmental Ltd. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF QuatroSense Environmental Ltd. IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:				Greystone Energy Systems Inc.	
		DIMENSIONS ARE IN INCHES		NAME	DATE	TITLE: Q6, GES INSTALLATION DRAWING	
		TOLERANCES:		DRAWN	2024/10/24		
		FRACTIONAL: ± 1/32		CHECKED	XY 2024/10/24		
		ANGULAR:		ENG APPR.	XY 2024/10/24		
		MACH ± .5 degrees BEND ± TWO PLACE DECIMAL ± .02 THREE PLACE DECIMAL ± .010		MFG APPR.			
		INTERPRET GEOMETRIC TOLERANCING PER:		Q.A.		SIZE DWG. NO. REV B 86650-002-005 A	
		MATERIAL:		COMMENTS:		SCALE: 1:8 WEIGHT: SHEET 1 OF 6	
		FINISH:					
NEXT ASSY	USED ON						
APPLICATION		DO NOT SCALE DRAWING					

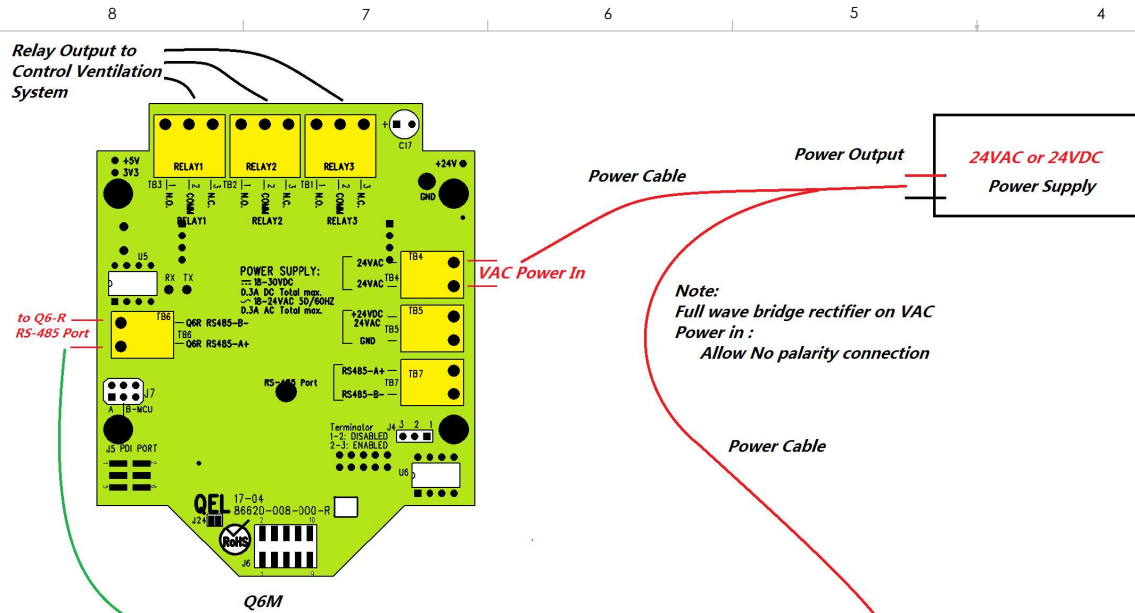

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
-	-	See Sheet1	-	-

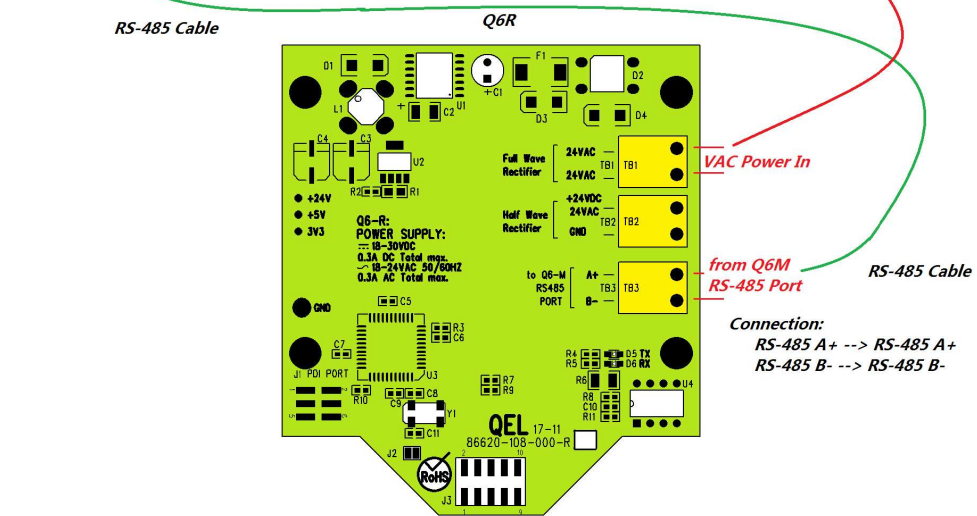

Power Cable

Power Output

24VAC or 24VDC Power Supply

Note:
 Full wave bridge rectifier on VAC Power in :
 Allow No polarity connection

Q6 Works Alone

Connection:
 RS-485 A+ --> RS-485 A+
 RS-485 B- --> RS-485 B-

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.


NEXT ASSY	USED ON
APPLICATION	DO NOT SCALE DRAWING

UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL: ± ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ± INTERPRET GEOMETRIC TOLERANCING PER: MATERIAL: FINISH: APPLICATION	NAME XY	DATE
	CHECKED XY	
	ENG APPR. XY	
	MFG APPR.	
	Q.A. XY	
COMMENTS:		

Greystone Energy Systems Inc.		
TITLE: Q6, GES Installation Drawing		
SIZE B	DWG. NO. 86650-002-005	REV A
SCALE: 1:2	WEIGHT:	SHEET 2 OF 6

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
-	-	See Sheet1	-	-

Q6 Connection with Q-Controller

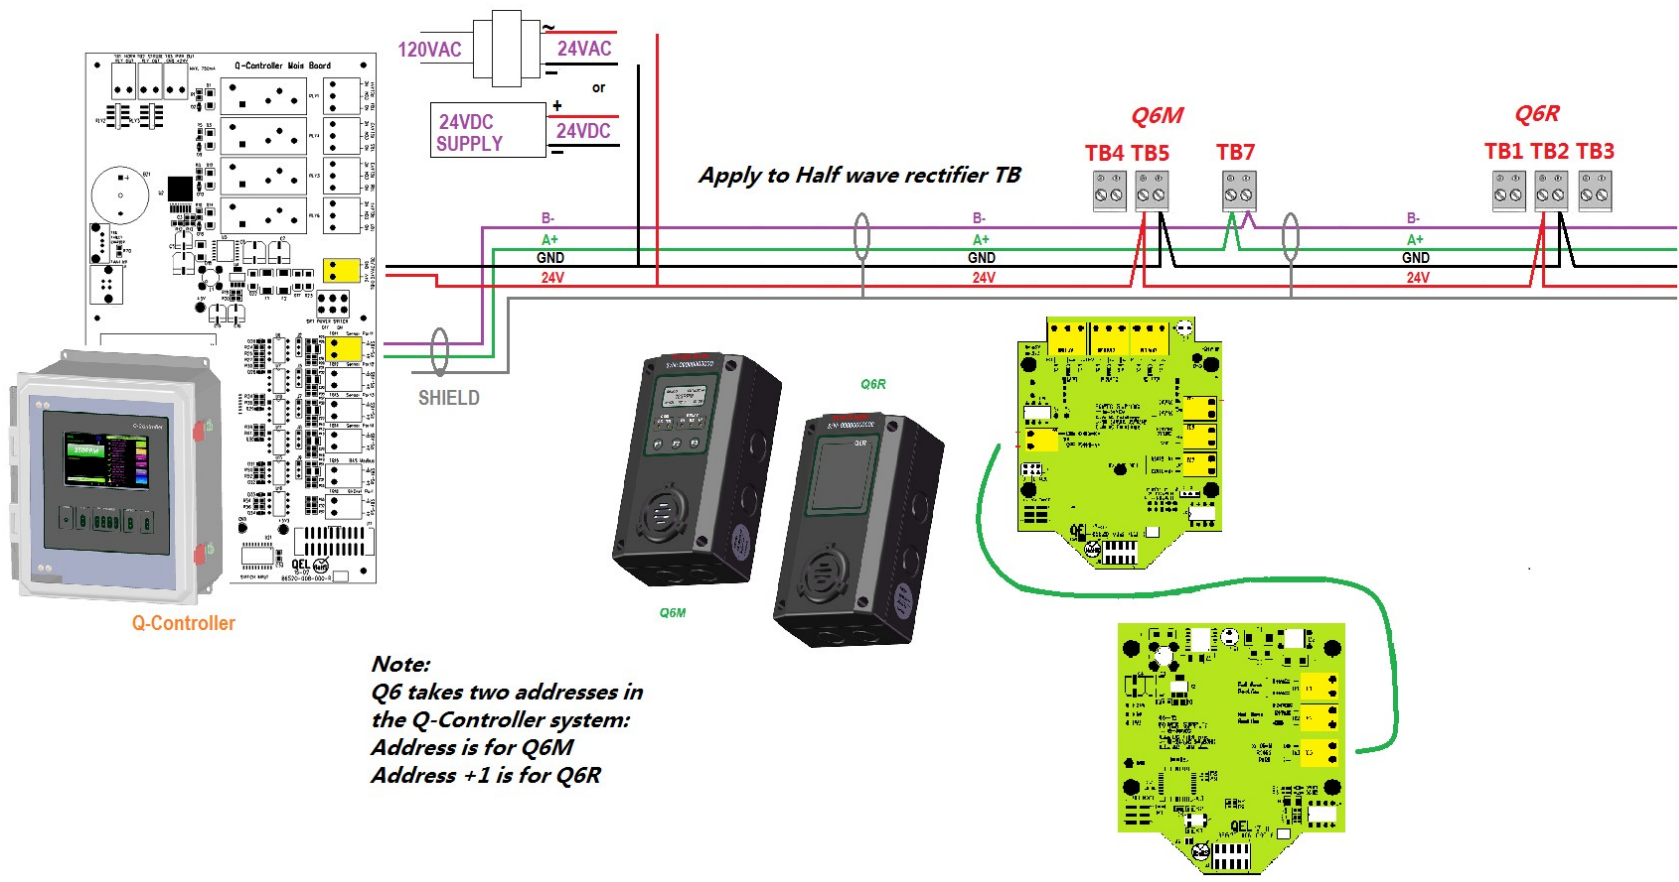

Note:
Q6 takes two addresses in the Q-Controller system:
Address is for Q6M
Address + 1 is for Q6R

Power Requirements:

The Q6M and Q6R power supply voltage requirements are nominally 24VAC or 24VDC. The Q6M and Q6R both have full wave rectifier and half wave rectifier on board. If the Q6 works alone, the 24VAC/DC can connect to either full wave rectifier or half wave rectifier connectors. If the Q6 connects to controllers, you will damage devices if you mix half wave and full wave rectifiers on the same AC source. Use extreme caution when sharing a common AC source. Sharing a common DC source is less problematic.


- QEL Q-Controller uses half-wave rectifier only, M-Controller uses full-wave rectifier only, so the Q6 can work with both controllers
- When the Q6 shares a common AC source with a Q-Controller, use the half wave rectifier connector Q6M TB5 and Q6R TB2
- When the Q6 shares a common AC source with an M-Controller or Q4 Controller, use the full wave rectifier connector Q6M TB4 and Q6R TB1

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:		NAME	DATE	Greystone Energy Systems Inc.	
		DIMENSIONS ARE IN INCHES		DRAWN	XY	TITLE:	
		TOLERANCES:		CHECKED	XY	Q6, GES	
		FRACTIONAL ±		ENG APPR.	XY	INSTALLATION DRAWING	
		ANGULAR: MACH ± BEND ±		MFG APPR.		SIZE	
		TWO PLACE DECIMAL ±		Q.A.		DWG. NO.	
		THREE PLACE DECIMAL ±		COMMENTS:		REV	
		INTERPRET GEOMETRIC TOLERANCING PER:					
		MATERIAL					
		FINISH					
NEXT ASSY	USED ON	APPLICATION		DO NOT SCALE DRAWING		SCALE: 1:2	
						SHEET 3 OF 6	

Q6 Connection with M-Controller

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
-	-	See Sheet1	-	-

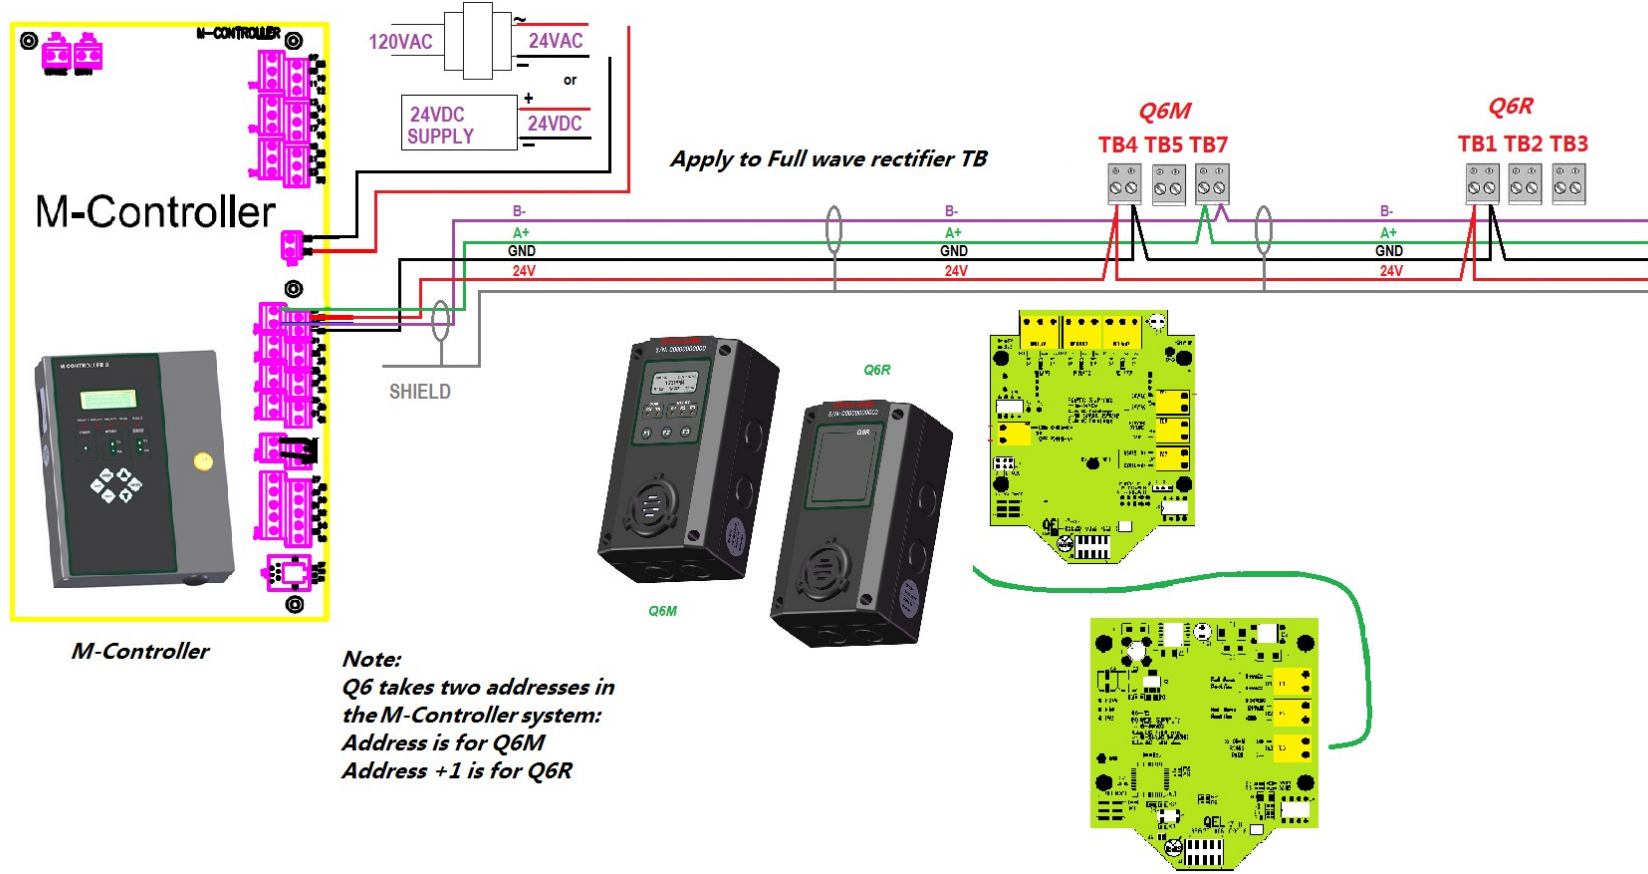

Note:
Q6 takes two addresses in the M-Controller system:
Address is for Q6M
Address +1 is for Q6R

Power Requirements:


The Q6M and Q6R power supply voltage requirements are nominally 24VAC or 24VDC. The Q6M and Q6R both have full wave rectifier and half wave rectifier on board. If the Q6 works alone, the 24VAC/DC can connect to either full wave rectifier or half wave rectifier connectors. If the Q6 connects to controllers, you will damage devices if you mix half wave and full wave rectifiers on the same AC source. Use extreme caution when sharing a common AC source. Sharing a common DC source is less problematic.

- QEL Q-Controller uses half-wave rectifier only, M-Controller uses full-wave rectifier only, so the Q6 can work with both controllers
- When the Q6 shares a common AC source with a Q-Controller, use the half wave rectifier connector Q6M TB5 and Q6R TB2
- When the Q6 shares a common AC source with an M-Controller or Q4 Controller, use the full wave rectifier connector Q6M TB4 and Q6R TB1

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:		NAME	DATE	Greystone Energy Systems Inc.	
		DIMENSIONS ARE IN INCHES		DRAWN	XY	TITLE:	
		TOLERANCES:		CHECKED	XY	Q6, GES	
		FRACTIONAL ±		ENG APPR.	XY	Installation Drawing	
		ANGULAR: MACH ± BEND ±		MFG APPR.		SIZE DWG. NO.	
		TWO PLACE DECIMAL ±		Q.A.	XY	B 86650-002-005	
		THREE PLACE DECIMAL ±		COMMENTS:		REV A	
NEXT ASSY		USED ON				SCALE: 1:2 WEIGHT: SHEET 4 OF 6	
APPLICATION		DO NOT SCALE DRAWING					

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
-	-	See Sheet1	-	-

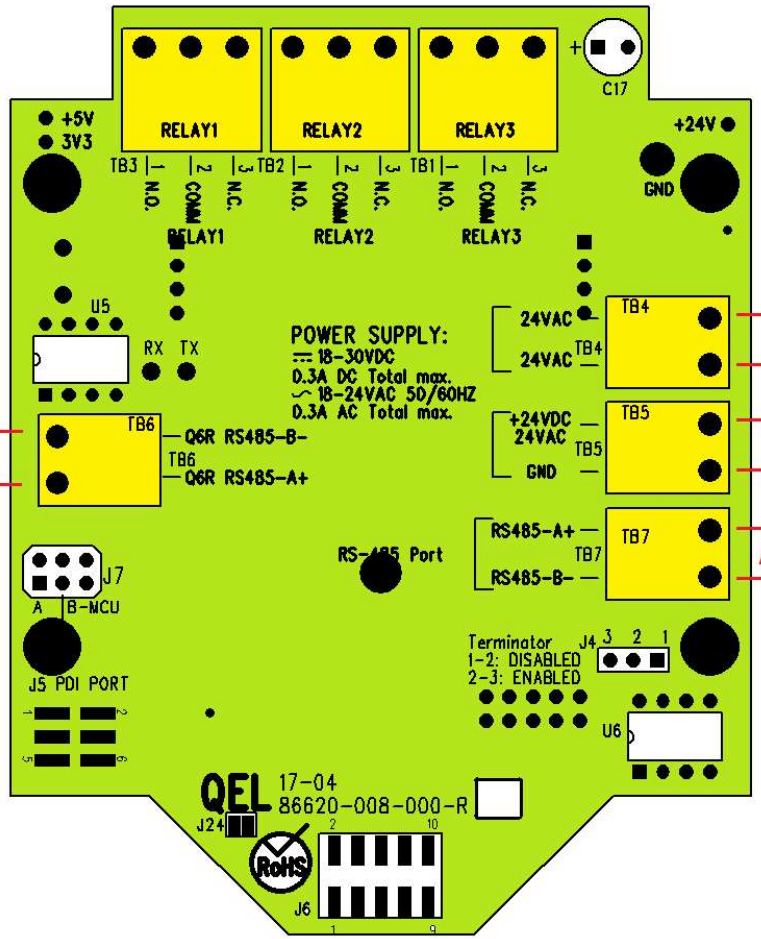

to Q6-R
RS-485 Port

24VAC/DC
Power In
Full-Wave
Rectifier

24VAC/DC
Power In
Half-wave
Rectifier

to Controller
RS-485 Port

Twisted Pair?

RS-485 is designed to be a balanced system. The signal on one wire is ideally the exact opposite of the signal on the second wire. In other words, if one wire is transmitting a high, the other wire will be transmitting a low, and vice versa. Although RS-485 can be successfully transmitted using multiple types of media, it should be used with wiring commonly called "twisted pair."

Terminator Enable/Disable?

The terminator on each end of the RS485 loop is designed to match the electrical impedance characteristic of the twisted pair loop, and will prevent signal echoes from corrupting the data on the line. The terminator should be enabled on BOTH ends of the RS485 loop. Short and medium length modbus/485 loops can operate without the terminating resistor. Longer runs may require the terminating resistors. But adding terminator dramatically increases power consumption.

Sensor Location:

- Several factors should be considered when selecting locations to install sensors. The following general suggestions should be considered to assure the detection of the target gas. Select the most suitable location for each sensor.
1. Air Currents: If there are fans, winds, or others sources of air movement, gases may tend to rise to collect in certain areas of a facility. The local air currents should be assessed to aid in selecting the sensor location. In outdoor situations considerations such as prevailing winds should be accounted for. Air convection can often be more important in determining gas concentrated areas than factors of Vapor Density.
 2. Vapor Density: For the target gas heavier than air. Detecting location should be 9 - 18 inch (0.23m to 0.46m) above the floor.
 3. Gas Emission Sources: As a rule, at least one sensor should be located in close proximity to each point where a leak is likely to occur. This is particularly important when a liquid having a low volatility is monitored.
 4. Environmental Factors: Designed to rugged outdoor use consider the following in selecting locations. Install sensors where they will be protected from wind, dust, snow, water, vibration and shock.

Note:
Avoid running communication wires or sensor input wires next to AC power wires or the relay output wires. These can be sources of noise that can affect signal quality.

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:				Greystone Energy Systems Inc.	
		DIMENSIONS ARE IN INCHES		DRAWN	XY	TITLE:	
		TOLERANCES:		CHECKED	XY	Q6, GES	
		FRACTIONAL ±		ENG APPR.	XY	INSTALLATION DRAWING	
		ANGULAR: MACH ± BEND ±		MFG APPR.		SIZE	
		TWO PLACE DECIMAL ±		Q.A.		DWG. NO.	REV
		THREE PLACE DECIMAL ±		COMMENTS:		86650-002-005	A
		INTERPRET GEOMETRIC TOLERANCING PER:					
		MATERIAL					
		FINISH					
NEXT ASSY	USED ON						
APPLICATION		DO NOT SCALE DRAWING		SCALE: 1:2		SHEET 5 OF 6	



8 7 6 5 4 3 2 1

D

C

B

A

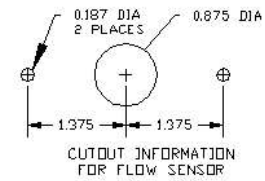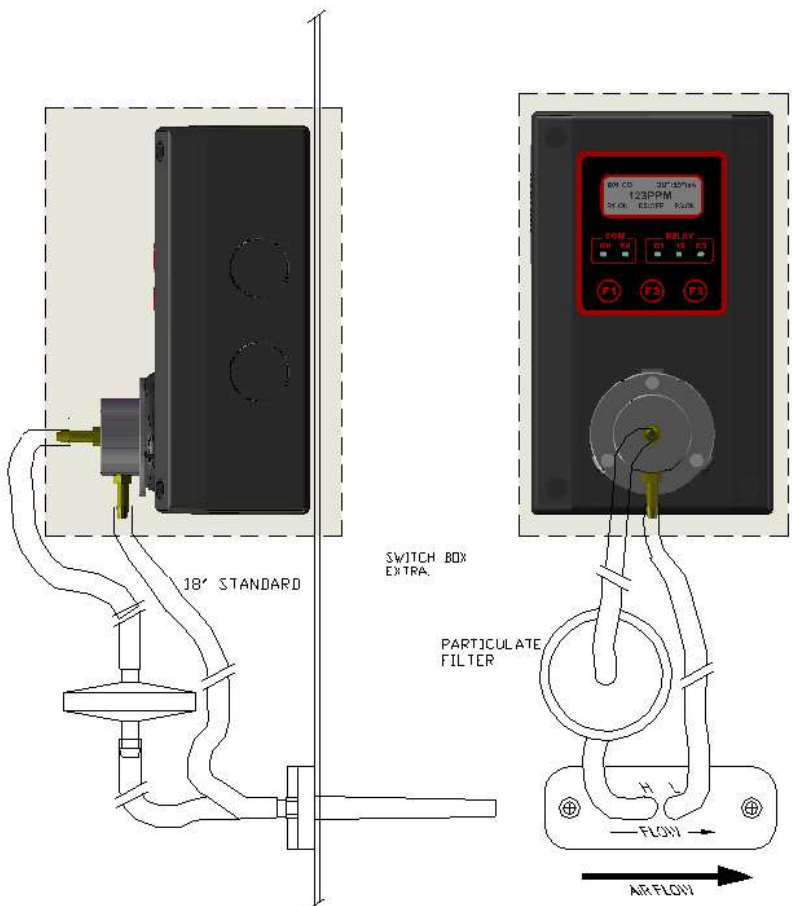

NOTE: GAS SAMPLING OCCURS WHEN AIR FLOW ACROSS THE TWO TUBES CAUSES DIFFERENTIAL PRESSURE. THIS METHOD WILL NOT WORK IN STATIC AIR SAMPLING.

DUCT MOUNTING OPTION

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:			Greystone Energy Systems Inc.	
		DIMENSIONS ARE IN INCHES			DRAWN	XY
		TOLERANCES:			CHECKED	XY
		FRACTIONAL ±			ENG APPR.	XY
		ANGULAR: MACH ± BEND ±			MFG APPR.	
		TWO PLACE DECIMAL ±			Q.A.	XY
		THREE PLACE DECIMAL ±			COMMENTS:	
		INTERPRET GEOMETRIC TOLERANCING PER:				
		MATERIAL				
		FINISH				
NEXT ASSY	USED ON					
APPLICATION		DO NOT SCALE DRAWING				
				NAME	DATE	
				TITLE:		
				Q6, GES		
				INSTALLATION DRAWING		
SIZE	DWG. NO.			REV		
B	86650-002-005			A		
SCALE: 1:2		WEIGHT:		SHEET 6 OF 6		

8 7 6 5 4 3 2 1